



Fiorenzato

F4E NANO

Manual Supplement
Quick tips

Thank you for your business! You are going to love your new F4E Nano Grinder. It combines classic beauty, value, and great performance. These instructional tips will help operate your grinder to its fullest capacity. Enjoy your new machine!

DESCRIPTION & VALUES

C1 = One cup M = Manual Grinding (Hand) C2 = Two cups

D = Quantity of doses during one day (includes single, double, and manual selections)

U = Quantity of doses during one week (includes single, double, and manual selections)

L = Quantity of doses during the lifetime of the grinder

Note: Please adjust the values for the time and day of the week from initial startup. This will eliminate discrepancies between the values.

ADJUSTING THE GRIND

Finer- Rotate adjustment collar **counter clockwise** (only make finer adjustments when the grinder burrs are rotating. This will eliminate jamming of the burrs and inaccurate adjustments)

Coarse- Rotate adjustment collar **clockwise**

OPERATION

All shots are shown with seconds and tens of seconds values

C1 & C2 - Preset timed shots

M - Manual shots "press and hold"

SHOT TIME ADJUSTMENT

To adjust shot times, simultaneously press the C1 and M. Using two hands (both thumbs) will ensure proper operation. You will hear three beeps followed by the "1 cup" display. To display the time in seconds for "1 cup" press C2. To increase time, press the C1 button per the amount of tenths of seconds you would like. To decrease time, press the M button per the amount of tenths per seconds you would like. Once this operation is complete please press C2 to skip to the "2 cup" value. You can repeat the increase/decrease time operation with the same buttons listed for the previous setting. Remember to press C2 to save the values and exit out.

STATISTICS DISPLAY AND MANUAL (CONTINUOUS) DEACTIVATION

Press and hold the C1 and the C2 button until you hear four beeps and the display says "STATS". Press C1 and "ON" will be displayed. To turn "OFF" press C2 (if you want to turn selection back to "ON" press M). To continue and store this value press C1 again and then "MAN" will appear. Press the C1 again until you see "ON". You can change it to "OFF" by pressing C2. Once you have done this, confirm and exit this menu by pressing C1.

If you choose to turn off statistics display (rolling headline showing D,U,and L values), the values will continue to be stored but information will not be shown.

TIME AND WEEK ADJUSTMENT

To adjust the time press and hold the C1 button and the M button simultaneously. Using two hands will ensure proper operation. You will hear two beeps followed by time display flashing. Adjust hours- up with M button, down with C2 button. Advance to the next setting with the C1 button once time values are adjusted. Next you will arrive at the week day setting. The days of the week are assigned a value such as follows:

Mon = 1 Tues = 2 Wed = 3 Thurs = 4 Fri = 5 Sat = 6 Sun = 7

Please note that time is only numeric (24 hours)

Safety devices-Thermal cut off

This grinder is equipped with and thermal cut off sensor. If your grinder becomes jammed with a foreign object and the burrs are no longer spinning, the power to the motor will be disconnected to avoid damage if overheating occurs. The burrs may become jammed if you adjust to the coffee too fine. If this occurs please disconnect grinder from the power supply, loosen the burrs, and wait till grinder cools off (approximately 15 minutes). NEVER try to release whatever is jammed in the burrs while the machine is plugged in. It is possible for the grinder burrs to start rotating if you try to remove whatever is blocking the burrs while the machine is on. This could cause personal injury. Please contact technical assistance if problem persists.

Safety devices- Safety Screws

There are safety screws located on the adjustment collar for the hopper and grind adjustment. These screws are not to be removed by the end user. The grind adjustment safety screw must never be removed as this would expose you to high speed rotating parts. This screw also makes sure that the burrs cannot be totally removed by unscrewing. There are two holes in the ring nut that will inhibit the collar from being totally unscrewed. If by some chance you unscrew the burrs totally be conscience that the threads are super fine and will pose resistance if there is coffee between them. Also, threads WILL cross thread if not properly installed. This will cause irreparable damage to your grinder. Please follow all safety recommendations.

Cleaning

Please follow the cleaning recommendations outlined in the manual. NEVER use water in any fashion to clean the inside of the grinder. To clean the inside of the grinder without removing the grinding ring, please use cleaning pills. Please refer to link below.

<https://www.chriscoffee.com/Full-Circle-Grinder-Cleaner-p/fclgr.htm>

Thank you and enjoy!

Chris

